

INSTALLATION



090 Series Camclosure® Indoor Integrated Camera System



Surface Mount/In-Ceiling

C2462M-D (3/08)

Contents

Important Safety Instructions	5
Regulatory Notices	5
Description	6
Parts List	6
Remove the Dome Bubble	7
Install the Back Box	8
Installation to Surface of a Ceiling/Wall	8
In-Ceiling Installation: Suspended Ceiling	10
In-Ceiling Installation: Fixed Ceiling/Wall	12
Installation to The Surface of a 4S Standard Electrical Box	13
Installation in a 4S Deep Electrical Box	14
Camera Positioning	15
Camera Adjustments	16
Switch Settings	16
Switch Settings for Fixed Focal Length Lens Without Auto Iris	16
Vertical Phase Adjustment (24 VAC Operation Only)	17
Adjusting the Phase Control	17
Reinstall the Dome Bubble	18
Dome Liner Installation	18
Dome Bubble Installation	19
Service Connector	20
Specifications	21
Backbox	21

List of Illustrations

1	How to Remove the Dome Bubble	7
2	Ceiling/Wall Installation	9
3	Concrete Ceiling/Wall Installation.	9
4	Ceiling Tile Installation.	10
5	How to Remove Surface Mount Ring from Back Box	11
6	In-Ceiling Installation to a Fixed Ceiling/Wall.	12
7	4S Standard Electrical Box Installation	13
8	4S Deep Electrical Box Installation	14
9	Positioning the Camera	15
10	Vertical Phase Adjustment	17
11	Installing the Dome Liner	18
12	Installing the Dome Bubble	19
13	Connecting the Monaural Headphone Plug to the Coaxial Cable	20

List of Tables

A	Power Input: Surface of Ceiling/Wall Installation.	6
B	Power Input: Suspended Ceiling Installation.	8
C	Power Input: Fixed Ceiling/Wall Installation	10
D	Power Input: 4S Standard Electrical Box Installation	11
E	Power Input: 4S Deep Electrical Box Installation	12

Important Safety Instructions

1. Installation and servicing should be done only by qualified service personnel and conform to all local codes.
2. Unless the unit is specifically marked as a NEMA Type 3, 3R, 3S, 4, 4X, 6, or 6P enclosure, it is designed for indoor use only and must not be installed where exposed to rain and moisture.
3. Use only installation methods and materials capable of supporting four times the maximum specified load.

Regulatory Notices

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

RADIO AND TELEVISION INTERFERENCE

This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However there is no guarantee that the interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

You may also find helpful the following booklet, prepared by the FCC: "How to Identify and Resolve Radio-TV Interference Problems." This booklet is available from the U.S. Government Printing Office, Washington D.C. 20402.

Changes and Modifications not expressly approved by the manufacturer or registrant of this equipment can void your authority to operate this equipment under Federal Communications Commission's rules.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Description

The ICS090 Series Camclosure® integrated camera system integrates a camera and lens package in a small, discreet dome. The system is easy to install and can be mounted or recessed to the surface of a ceiling or wall.

Prior to the installation of your new system, thoroughly familiarize yourself with the information in this manual.

PARTS LIST

The following materials are supplied with the 090 Series Camclosure integrated camera system:

Qty	Description
1	Assembled ICS090 Series Camclosure (back box, smoked dome bubble, and camera module)
1	Clear dome bubble
1	Plastic liner
1	Adapter plate
2	8-32 x 1.00-inch Phillips pan head screws
2	8-32 x 0.750-inch self-tapping screws
2	8-32 x 2.50-inch self-tapping screws
2	10-32 x 1.50-inch self-tapping screws

Remove the Dome Bubble

Turn the dome bubble counterclockwise and lift (refer to Figure 1). Place the bubble on a nonabrasive surface.

If the unit is supplied with a dome liner, remove the liner before installing the unit. To remove the liner, gently lift it from the unit. Place the liner to the side; it will be reinstalled along with the bubble after the installation has been completed following installation..

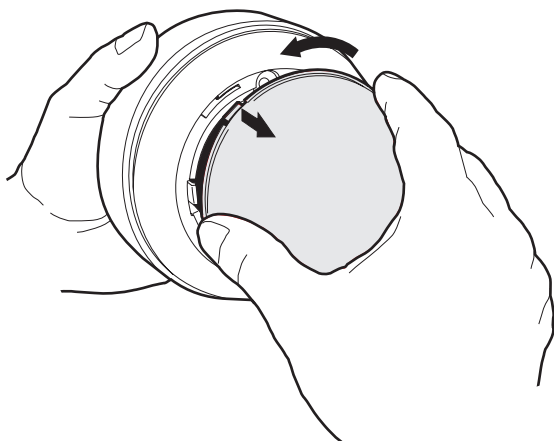


Figure 1. How to Remove the Dome Bubble

Install the Back Box

The installation methods for the ICS090 Series include the following options:

- Mount to the surface of a ceiling or wall
- Install in a suspended ceiling
- Install in a fixed ceiling or wall
- Mount to the surface of a 4S standard electrical box
- Install in a 4S deep electrical box

Select the best method for your installation and refer to the following pages for instructions.

INSTALLATION TO SURFACE OF A CEILING/WALL

Refer to Figure 2 for the following steps. Refer to Figure 3 if installing the unit to a concrete ceiling/wall.

1. Pull video and power wires through the ceiling/wall.
2. Connect the video cable/wires.

BNC: Connect the BNC connector from the Camclosure to a mating BNC connector.

Twisted pair: Connect the blue wire to Video +; connect the gray wire to Video -.

3. Connect the power wires.

Table A. Power Input: Surface of Ceiling/Wall Installation

Voltage	Red Wire	Black Wire
12 VDC	+	Ground
24 VAC	~	~

AC operation only: If you are wiring more than one ICS090 Camclosure to the same transformer, connect one side of the transformer to the red wire on all units, and then connect the other side of the transformer to the black wire on all units. Failure to connect all of the units in the same way will cause the cameras to be out of phase with each other, which might produce a vertical roll when switching between cameras.

4. Use the 6-32 toggle bolts (not supplied) to attach the surface mount ring and back box to the mounting surface, refer to Figure 2.

NOTE: For a concrete ceiling/wall installation, use 8-32 mounting hardware (not supplied), refer to Figure 3.

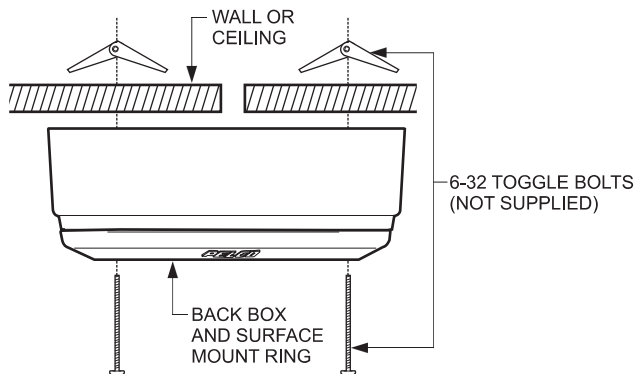


Figure 2. Ceiling/Wall Installation

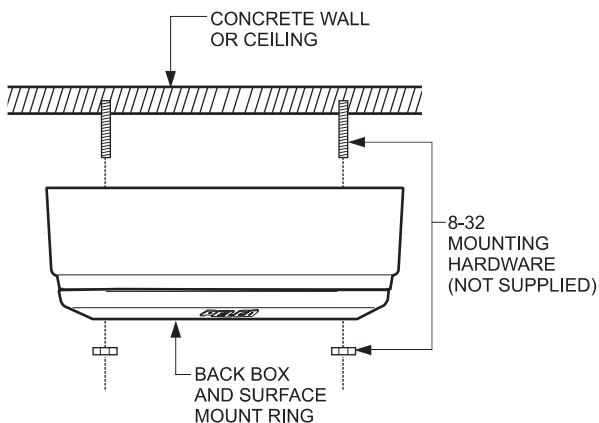


Figure 3. Concrete Ceiling/Wall Installation

IN-CEILING INSTALLATION: SUSPENDED CEILING

Refer to Figure 4 and complete the following steps.

1. Remove the ceiling tile from the ceiling.
2. Cut a 4-inch diameter hole in the ceiling tile.
3. Remove the surface mount ring from the back box. Refer to Figure 5 and complete the following steps:
 - a. Place your fingers on the circular marks located on the sides of the surface mount ring.
 - b. Pinch the sides.
 - c. Lift and remove the surface mount ring from the back box.

NOTE: Do not discard the surface mount ring because it is required to complete the installation.

4. Turn the surface mount ring upside down and place it on the inside of the ceiling tile.
5. Attach the back box to the ceiling tile and surface mount ring with two 10-32 x 1.50-inch self-tapping screws (supplied).

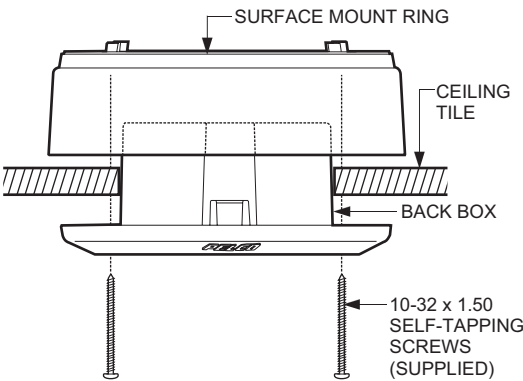


Figure 4. Ceiling Tile Installation

6. Replace the ceiling tile.
7. Remove an adjacent ceiling tile and connect the video cable/wires.

BNC: Connect the BNC connector from the Camclosure to a mating BNC connector.

Twisted pair: Connect the blue wire to Video +; connect the gray wire to Video -.

8. Connect the power wires.

Table B. Power Input: Suspended Ceiling Installation

Voltage	Red Wire	Black Wire
12 VDC	+	Ground
24 VAC	~	~

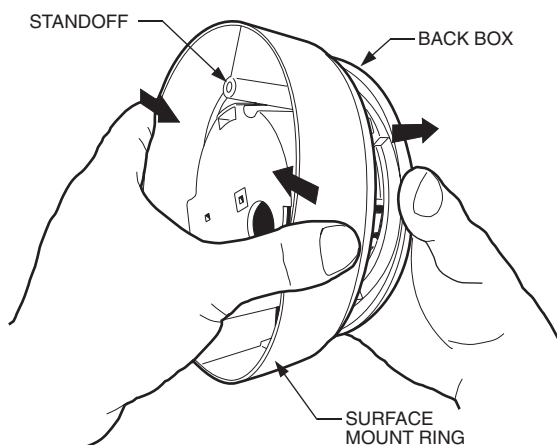


Figure 5. How to Remove Surface Mount Ring from Back Box

AC operation only: If you are wiring more than one ICS090 Camclosure to the same transformer, connect one side of the transformer to the red wire on all units, and then connect the other side of the transformer to the black wire on all units. Failure to connect all of the units in the same way will cause the cameras to be out of phase with each other, which might produce a vertical roll when switching between cameras.

IN-CEILING INSTALLATION: FIXED CEILING/WALL

Refer to Figure 6 and complete the following steps.

1. Cut a 4-inch diameter hole in the ceiling/wall.
2. Remove the surface mount ring from the back box. Refer to Figure 5 and complete the following steps:
 - a. Place your fingers on the circular marks located on the sides of the surface mount ring.
 - b. Pinch the sides.
 - c. Lift and remove the surface mount ring from the back box.
3. Connect the video cable/wires.

BNC: Connect the BNC connector from the Camclosure to a mating BNC connector.

Twisted pair: Connect the blue wire to Video +; connect the gray wire to Video -.

4. Connect the power wires.

Table C. Power Input: Fixed Ceiling/Wall Installation

Voltage	Red Wire	Black Wire
12 VDC	+	Ground
24 VAC	~	~

AC Operation Only: If you are wiring more than one ICS090 Camclosure to the same transformer, connect one side of the transformer to the red wire on all units, and then connect the other side of the transformer to the black wire on all units. Failure to connect all of the units in the same way will cause the cameras to be out of phase with each other, which might produce a vertical roll when switching between cameras.

5. Use the 3-16 toggle bolts (not supplied) to attach the back box to the mounting surface.

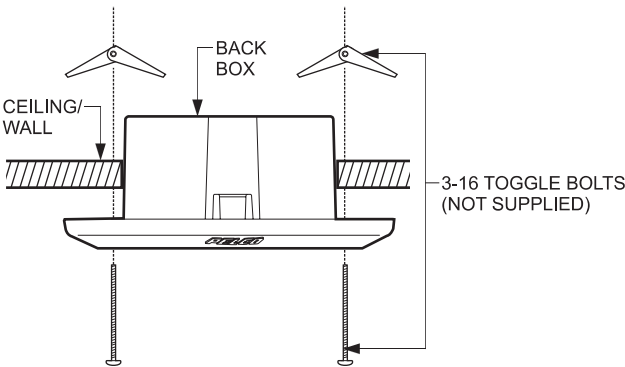


Figure 6. In-Ceiling Installation to a Fixed Ceiling/Wall

INSTALLATION TO THE SURFACE OF A 4S STANDARD ELECTRICAL BOX

Refer to Figure 7 and complete the following steps.

- 1. Attach the adapter ring to the 4S box with the two 8-32 x 1.00-inch screws (supplied).
- 2. Connect the video cable/wires.

BNC: Connect the BNC connector from the Camclosure to a mating BNC connector.

Twisted pair: Connect the blue wire to Video +; connect the gray wire to Video -.

- 3. Connect the power wires.

Table D. Power Input: 4S Standard Electrical Box Installation

Voltage	Red Wire	Black Wire
12 VDC	+	Ground
24 VAC	~	~

AC Operation Only: If you are wiring more than one ICS090 Camclosure to the same transformer, connect one side of the transformer to the red wire on all units, and then connect the other side of the transformer to the black wire on all units. Failure to connect all of the units in the same way will cause the cameras to be out of phase with each other, which might produce a vertical roll when switching between cameras.

- 4. Attach the surface trim ring and back box to the adapter plate with the two 8-32 x 2.50-inch screws (supplied).

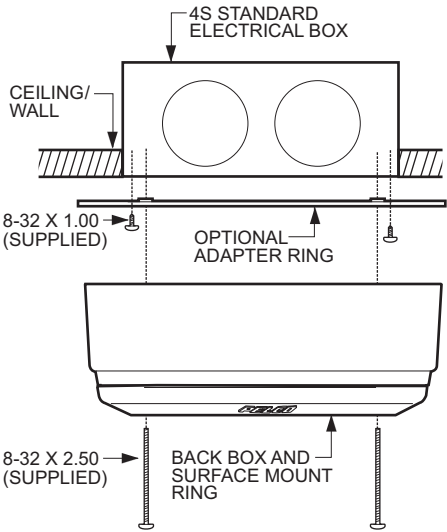


Figure 7. 4S Standard Electrical Box Installation

INSTALLATION IN A 4S DEEP ELECTRICAL BOX

Refer to Figure 8 and complete the following steps.

1. Remove the surface mount ring from the back box. Refer to Figure 5 and complete the following steps:
 - a. Place your fingers on the circular marks located on the sides of the surface mount ring.
 - b. Pinch the sides.
 - c. Lift and remove the surface mount ring from the back box.
2. Attach the adapter ring to the 4S box with the two 8-32 x 1.00-inch screws (supplied).
3. Connect the video cable/wires.

BNC: Connect the BNC connector from the Camclosure to a mating BNC connector.

Twisted pair: Connect the blue wire to Video +; connect the gray wire to Video -.

4. Connect the power wires.

Table E. Power Input: 4S Deep Electrical Box Installation

Voltage	Red Wire	Black Wire
12 VDC	+	Ground
24 VAC	~	~

AC operation only: If you are wiring more than one ICS090 Camclosure to the same transformer, connect one side of the transformer to the red wire on all units, and then connect the other side of the transformer to the black wire on all units. Failure to connect all of the units in the same way will cause the cameras to be out of phase with each other, which might produce a vertical roll when switching between cameras.

5. Attach the back box to the adapter plate with the two 8-32 x 0.750-inch screws (supplied).



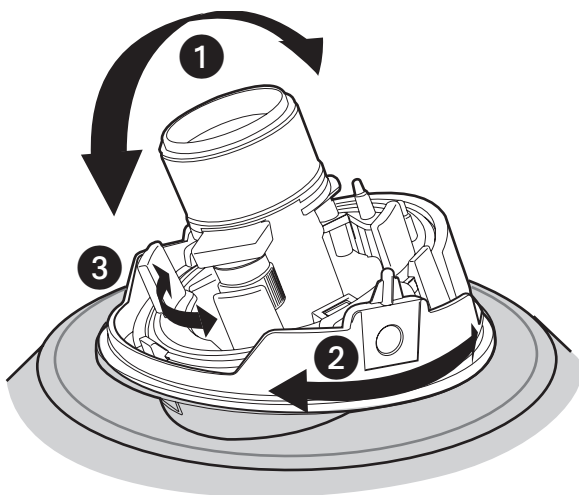


Figure 8. 4S Deep Electrical Box Installation

Camera Positioning

Manually rotate and tilt the camera module to position the camera. Do not over-rotate the module.

 **WARNING:** Excessively turning the module in one direction could result in damage to the wiring.

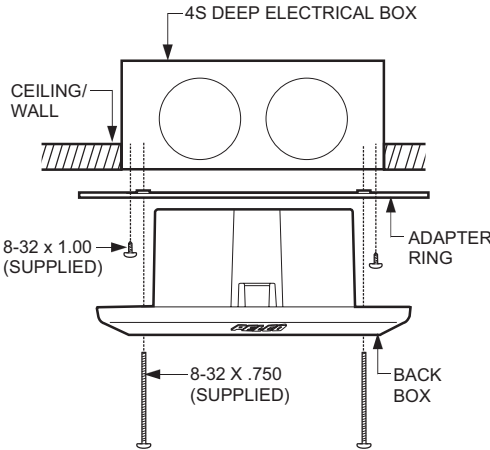

❶ Tilt 140° ❷ Pan 360° ❸ Rotation 360°

Figure 9. Positioning the Camera


Camera Adjustments

SWITCH SETTINGS

SWITCH SETTINGS FOR FIXED FOCAL LENGTH LENS WITHOUT AUTO IRIS

Refer to the switch drawing. The switch is located next to the lens. Automatic backlight compensation (factory setting) is used under varying lighting conditions (such as outdoors) or fixed lighting conditions where there are no bright spots that darken other picture details. Manual backlight compensation is used in fixed lighting conditions, to optimize the picture detail when there are bright spots.

- **ALC/ELC switch:** Always ELC
- **Y/DC switch:** Not used
- **Auto backlight compensation:** BLC switch OFF ABL switch ON
- **Manual backlight compensation:** BLC switch ON ABL switch OFF

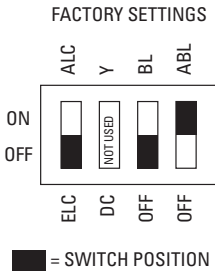

VERTICAL PHASE ADJUSTMENT (24 VAC OPERATION ONLY)

When using more than one camera power supply, a brief vertical roll may occur on the monitor when a camera view is switched. To eliminate vertical roll, reverse the 24 VAC connections on one camera. If both cameras are connected to the same transformer, this should solve the problem. If reversing the connections does not solve the problem, adjust the phase control by synchronizing, or line-locking, the cameras to one another.

ADJUSTING THE PHASE CONTROL

It may be necessary to have two people in communication when synchronizing the cameras: one person at the camera and another person at the monitor to observe the vertical roll and the effect of any adjustments made at the camera.

To synchronize the cameras:

1. Choose a reference camera to which all other cameras will be phased.
2. Select a camera and synchronize it to the reference camera by turning the phase adjustment control (refer to Figure 10) clockwise or counterclockwise.
3. Each time an adjustment is made, switch back and forth between the camera you are adjusting and the reference camera. Repeat this process as many times as necessary, until the roll between the cameras is no longer noticeable.
4. Adjust the phase of all other cameras by repeating steps 2 and 3. Always adjust to the reference camera selected in step 1.

NOTE: The preferred method for camera phase adjustment is to use a dual trace oscilloscope to align the vertical sync pulses of the reference camera to the selected camera(s).

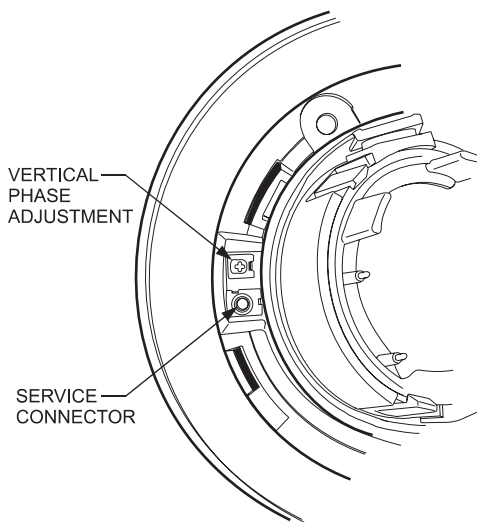


Figure 10. Vertical Phase Adjustment

Reinstall the Dome Bubble

DOMELINER INSTALLATION

If the unit is supplied with a dome liner, reinstall the liner before installing the dome bubble. To install the liner, refer to Figure 11 complete the following steps:

1. Align the studs located on the camera module with the clips on the liner.
2. Lightly pinch the sides of the liner, opposite from the clips, and place the clips over the studs.
3. Once the liner is secure, position the viewing window of the liner over the lens of the camera.
4. Install the bubble.

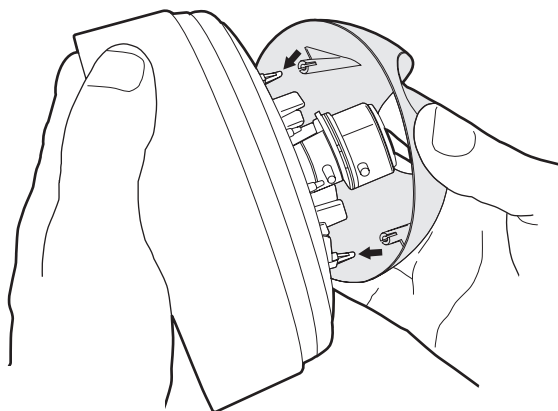


Figure 11. Installing the Dome Liner

DOME BUBBLE INSTALLATION

To install the dome bubble refer to Figure 12 and complete the following steps:

1. Select the bubble (clear or smoked).
2. Align the standoffs of the bubble with the slots of the back box.
3. Turn the bubble clockwise, until it locks in place.

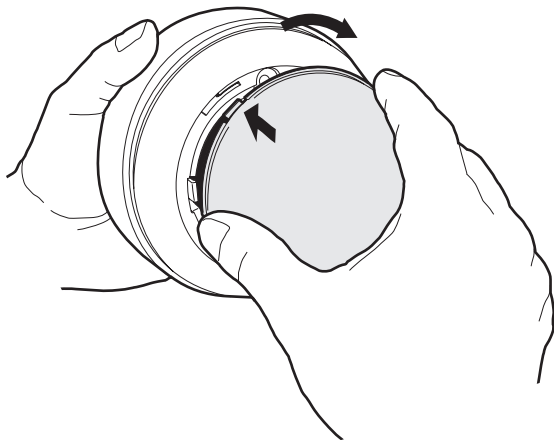


Figure 12. Installing the Dome Bubble

Service Connector

An optional 4-foot service/monitor cable, part number ICS090-SC, is available for on-site setup and adjustments. To use the cable simply plug one end of the cable directly into the service connector of the ICS090, and then connect the other end to any standard BNC (VIDEO IN) connector on a monitor.

To assemble a longer service cable for the ICS090 Series Camclosure, purchase the following parts at a local electronics supply store:

Qty	Description
1	2.5 mm monaural headphone plug
1	CPM 88 miniature coaxial connector
1	RG174/U coaxial cable

To assemble the cable:

1. Attach the CPM 88 miniature coaxial connector to one end of the cable. Follow the directions supplied with the miniature coaxial connector.
2. Refer to Figure 13 and complete the following steps to attach the 2.5 mm monaural plug to the other end of the coaxial cable:
 - a. Remove the support sleeve from the plug, and then slip the support sleeve over the end of the cable.
 - b. Prepare the cable.
 - c. Solder the center connector of the cable to the center pin of the plug.
 - d. Thread the braid of the cable through the hole in the crimp pin, and then solder the braid to the top of the crimp pin.
 - e. Crimp the end of the crimp pin around the cable.
 - f. Reassemble the support sleeve and the plug.

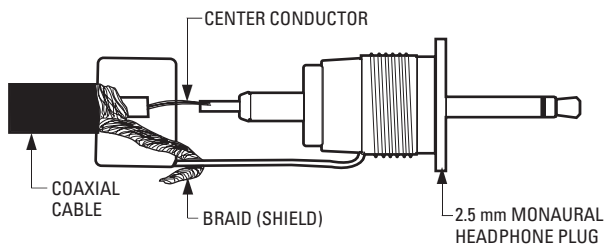


Figure 13. Connecting the Monaural Headphone Plug to the Coaxial Cable

Specifications

BACKBOX


Electrical

Input Voltage	12 VDC or 24 VAC ($\pm 10\%$), autosensing
Power Consumption	3 W or less
Video Connector	BNC


General

Pan/Tilt Adjustment	
Pan	360°
Tilt	140° (20° to 160° range)
Rotation	360°
Construction	
Back Box and	ABS plastic
Surface Mount Ring	Polycarbonate
Bubble	White
Finish	White
Environment	Indoor
Operating Temperature	32° to 120°F (0° to 49°C)
Weight	
Unit	0.52 lb (0.24 kg)
Shipping	2.0 lb (0.91 kg)

(Design and product specifications subject to change without notice.)

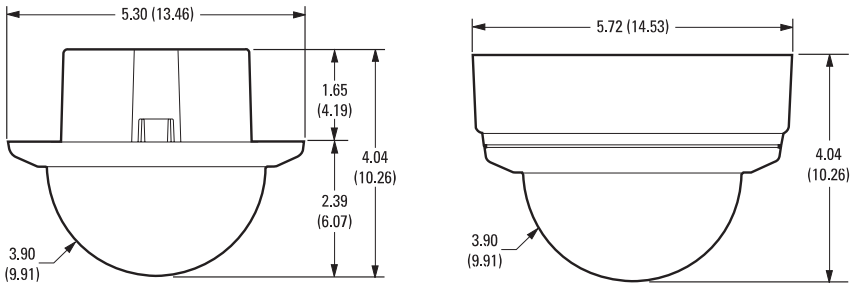

NOTE: VALUES IN PARENTHESES ARE CENTIMETERS; ALL OTHERS ARE INCHES

 **Green** The materials used in the manufacture of this document and its components are compliant to the requirements of Directive 2002/95/EC.



This equipment contains electrical or electronic components that must be recycled properly to comply with Directive 2002/96/EC of the European Union regarding the disposal of waste electrical and electronic equipment (WEEE). Contact your local dealer for procedures for recycling this equipment.

PRODUCT WARRANTY AND RETURN INFORMATION

WARRANTY

Pelco will repair or replace, without charge, any merchandise proved defective in material or workmanship **for a period of one year** after the date of shipment.

Exceptions to this warranty are as noted below:

- Five years on fiber optic products and TW3000 Series unshielded twisted pair (UTP) transmission products.
- Three years on Spectra® IV products.
- Three years on Genex® Series products (multiplexers, server, and keyboard).
- Three years on DX Series digital video recorders, DVR5100 Series digital video recorders, DigitalSENTRY® Series hardware products, DVX Series digital video recorders, NVR300 Series network video recorders, and Endura® Series distributed network-based video products.
- Three years on Camclosure® and Pelco-branded fixed camera models, except the CC3701H-2, CC3701H-2X, CC3751H-2, CC3651H-2X, MC3651H-2, and MC3651H-2X camera models, which have a five-year warranty.
- Three years on PMCL200/300/400 Series LCD monitors.
- Two years on standard motorized or fixed focal length lenses.
- Two years on Legacy®, CM6700/CM6800/CM9700 Series matrix, and DF5/DF8 Series fixed dome products.
- Two years on Spectra III™, Spectra Mini, Esprit®, ExSite®, and PS20 scanners, including when used in continuous motion applications.
- Two years on Esprit and WW5700 Series window wiper (excluding wiper blades).
- Two years (except lamp and color wheel) on Digital Light Processing (DLP®) displays. The lamp and color wheel will be covered for a period of 90 days. The air filter is not covered under warranty.
- Two years on Intelli-M® eIDC controllers.
- One year (except video heads) on video cassette recorders (VCRs). Video heads will be covered for a period of six months.
- Six months on all pan and tilts, scanners, or preset lenses used in continuous motion applications (preset scan, tour, and auto scan modes).

Pelco will warrant all replacement parts and repairs for 90 days from the date of Pelco shipment. All goods requiring warranty repair shall be sent freight prepaid to a Pelco designated location. Repairs made necessary by reason of misuse, alteration, normal wear, or accident are not covered under this warranty.

Pelco assumes no risk and shall be subject to no liability for damages or loss resulting from the specific use or application made of the Products. Pelco's liability for any claim, whether based on breach of contract, negligence, infringement of any rights of any party or product liability, relating to the Products shall not exceed the price paid by the Dealer to Pelco for such Products. In no event will Pelco be liable for any special, incidental, or consequential damages (including loss of use, loss of profit, and claims of third parties) however caused, whether by the negligence of Pelco or otherwise.

The above warranty provides the Dealer with specific legal rights. The Dealer may also have additional rights, which are subject to variation from state to state.

If a warranty repair is required, the Dealer must contact Pelco at (800) 289-9100 or (559) 292-1981 to obtain a Repair Authorization number (RA), and provide the following information:

1. Model and serial number
2. Date of shipment, P.O. number, sales order number, or Pelco invoice number
3. Details of the defect or problem

If there is a dispute regarding the warranty of a product that does not fall under the warranty conditions stated above, please include a written explanation with the product when returned.

Method of return shipment shall be the same or equal to the method by which the item was received by Pelco.

RETURNS

To expedite parts returned for repair or credit, please call Pelco at (800) 289-9100 or (559) 292-1981 to obtain an authorization number (CA number if returned for credit, and RA number if returned for repair) and designated return location.

All merchandise returned for credit may be subject to a 20 percent restocking and refurbishing charge.

Goods returned for repair or credit should be clearly identified with the assigned CA or RA number and freight should be prepaid.

1-8-08

REVISION HISTORY

Manual #	Date	Comments
C2462M	11/02	Original version.
C2462M-A	1/03	Added Regulatory Notices for FCC Class B.
C2462M-B	10/05	Revised switch-setting descriptions for varifocal lens. Added WEEE statement.
C2462M-C	1/06	Updated factory switch settings for varifocal lens per ECO 13164. Updated wiring information. Added information about dome bubble.
C2462M-D	3/08	Revised for standard resolution color cameras with fixed focal lenses.



Worldwide Headquarters
3500 Pelco Way
Clovis, California 93612 USA

USA & Canada
Tel: 800/289-9100
Fax: 800/289-9150
International
Tel: 1-559/292-1981
Fax: 1-559/348-1120

www.pelco.com

ISO9001

Australia | Finland | France | Germany | Italy | Macau | The Netherlands | Russia | Singapore
South Africa | Spain | Sweden | United Arab Emirates | United Kingdom | United States